

Ellison AllStar

AllStar[™] Machine Cutting Pad / Prestige[™] Machines Adapter Pad

AllStar™ Cutting Pad



★ After prolonged use, the Cutting Pad tends to wear out and you may experience inconsistent cutting. Periodically flipping over the Cutting Pad will reduce wear.




- ★ Store the Cutting Pad in the front drawer.
- ★ Depending on use, replace the Cutting Pad after six months.

Prestige[™] Adapter Pad



★ The Prestige[™] Adapter Pad allows both Ellison[®] AllStar[™] and Sizzix[®] Bigz[™] Dies to be used with the Prestige Pro, Prestige Select and XL LetterMachine.

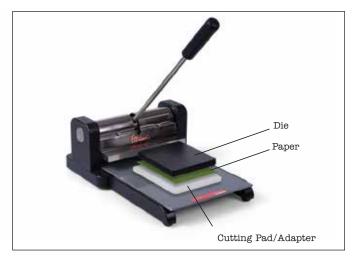

★ Place Prestige[™] Adapter Pad on top of the Prestige Cutting or Crease Pad. Place paper on top of Adapter Pad. Place die, blade side down, on top of material to be cut.